

FIIO

简体中文 便携立体声磁带播放器

CP13有一个USB接口,丝印为"POWER IN",推荐使用5V-2A的适配器,对产品供电和充电。 充电指示灯的颜色代表了产品当前所处的充电状态。充电指示灯红灯亮,代表电池正在进行充电;当充电 指示灯亮绿灯,则代表电池已充满;未处在充电状态时,指示灯不亮。

按键操作

- ●播放键:按下播放按钮,机器左边转轴开始转动,如机器中有磁带,则开始正常播放。
- 快进键:按下快进按钮,机器左边转轴开始快速转动,如机器中有磁带,则开始快速前进,此时无音乐输出。
- 快退键:按下快退按钮,机器右边转轴开始快速转动,如机器中有磁带,则开始快速后退,此时无音乐输出。
- 停止键:在播放或快进、快退状态,按下停止按钮,机器停止,当手指移开后会自动回弹至原位。
- 音量旋钮:旋动音量旋钮即可实现音量大小的调节,顺时针旋转为增大音量,逆时针旋转则为减小音量。

注意事项

- ★请勿将电池置于高温环境中,电池浸水后禁止使用,若出现鼓胀,请勿继续使用。禁止拆解、撞击、挤压、 刺破电池或将电池投入火中;
- ★ 请勿将产品置于温度过高或过低(45°C以上0°C以下),请勿将产品放置在车内等密闭高温环境中;
- ★ 不可自行维修、拆卸和将产品放在有水的地方; ★ 当长期没有使用本产品时,需要定期给产品充电,以保证电池寿命;
- ★ 当您在使用耳机时,会因此听不清外界环境声音,为了您的安全,请避免在危险环境中使用耳机;
- ★ 搭配电压过高的充电适配器充电可能会损坏机器,请选择推荐使用的充电器进行充电;
- ★使用本产品时,请注意远离磁性物体,以防止对产品使用造成影响或对产品本身产生不可逆的损害。

包装清单 (请核对包装内是否包括以下物品)

● CP13主机 ● 快速入门 ● 售后维修卡

了解更多

- 有关CP13的相关视频说明和常见问题解答(FAQ), 请扫描CP13 FAQ 二维码。
- 了解更多产品信息,请访问:www.fiio.com







简体中文 便携立体声磁带播放器

产品名称:便携立体声磁带播放器 产品型号:F3281C 额定输入:5V -- 2A 尺寸:约120x88.3x31.8mm

执行标准:GB4943.1-2022 制造厂:广州飞傲电子科技有限公司

地址:广州市白云区龙归街夏良龙良路21号

由于产品不断改进,各项规格及设计随时更改,恕不另行通知。

环保材料说明

重量:约310g

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr,VI)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
РСВ	Х	0	0	0	0	0
PCBA 焊点	Х	0	0	0	0	0
元器件	Х	0	0	0	0	0
显示屏*	Х	0	0	0	0	0
电池*	Х	0	0	0	0	0
外观件	0	0	0	0	0	0
配件*	Х	0	0	0	0	0

注:表中标记"X"的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。带*号部件表示如果在您所购买的产品 中无该部件,请忽略表中该部件信息。

- O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572-2011规定的限量要求以下。
- X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572-2011规定的限量要求。

根据中国电子行业标准SJ/T 11364-2014 和相关的中国政府法规,本产品及其某些内部或外部组件上可能带有环保使用期 限标识。取决于组件和组件制造商,产品及其组件上的使用期限标识可能有所不同。组件上的使用期限标识优先于产品上 任何与之相冲突的或不同的环保使用期限标识。

1 此环保使用期限只适用于产品在规定的条件下工作

Charging

2

The CP13 has a USB port marked as "POWER IN". It is suggested to use a 5V=2A power adapter for power supply and charging.

The color of the charging indicator light represents the current charging status of the device. The red light on means the battery is being charged, and the green light on means the battery is fully charged. If the device is not in the charging state, the indicator light is off.

Button Operation

- Play: Press and the left spindle will start to rotate. If there is a cassette in the device, it will start to
- Fast forward: Press and the left spindle will start to rotate fast. If there is a cassette in the device, it will start to move forward fast and no music will output at this time.
- Fast rewind: Press and the right spindle will start to rotate fast. If there is a cassette in the device, it will start to rewind fast, and no music will output at this time.
- Stop: In the playback, fast forward or fast rewind state, press the Stop button to stop the device. After removing the finger, it will automatically rebound to its original position.
- Volume knob: The volume level can be adjusted by rotating the volume knob- rotate clockwise to increase the volume and anticlockwise to decrease the volume.

Notes and Precautions

- ★ Please do not put the battery in a high-temperature environment. The battery is prohibited from use if it is soaked in water, or if it gets swollen. Please do not disassemble, hit, crush, or puncture the battery, and do not put it on fire.
- ★ Please do not place the device in circumstances of excessive high/low temperatures (above 45°C or below 0°C), or in an enclosed high-temperature environment, such as in a car.
- ★ Please do not repair or disassemble the product on your own and do not put it near water.
- ★ If the device is to be left unused for a long time, please recharge it periodically to preserve its battery life.
- \bigstar You might not be able to hear the sound of the surroundings when using headphones. For your safety, please avoid using headphones in dangerous situations.
- ★ It is recommended to use a suitable charger in case of a high-voltage adapter causing damage to
- ★ When using this product, please keep it away from magnetic objects to prevent any effect on the use of the product or irreversible damage to the product itself.

List of Items Included (please check if the following items are included)

USB cable

Portable Stereo Cassette Player

To Learn More

- For related video instructions of the CP13 and FAQ (Frequently Asked Questions), please scan the QR code below.
- To learn more about the product, please visit our





Due to continuous improvement, every specification and design is subject to change at any time without further notice.

WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be handed as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Hereby, Guangzhou FIIO Electronics Technology Co., Ltd declares that this device is in compliance with Directive 2014/30/EU. The full text of the EU declaration of conformity is available at: www.fiio.com/doc

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cassette door-

picture, and then close the door after the cassette is in the right place.

Put in cassette

Please open the front cassette door to take out or put in the cassette in the direction shown in the

↑ Take out cassette

Take out and Put in the Cassette

indicator light

headphone out

USB port-

● CP13

User manual

Warranty card