

简体中文 台式自动唱盘机

### 使用前须注意

- 安全须知**
  - ★若有任何固体或液体掉进产品内部,请关闭电源,并经合格专业技术人员检查后方可再行使用。
  - ★不可自行维修、拆卸产品。
- 供电须知**
  - ★搭配电压过高的适配器可能会损坏机器,请选择推荐使用的适配器进行使用。
- 产品须知**
  - ★请勿将产品置于温度过高或过低(45°C以上/0°C以下)的环境中。
  - ★请勿将产品放在热源附近、易受阳光直射、沙尘过多、潮湿、易受雨淋、具有机械冲击、表面凹凸不平的地方,或者车窗关闭的车内。
  - ★请勿将任何重物放在产品的上面。
- 音量须知**
  - ★当您在使用耳机或音箱时,会因此听不清外界环境声音,为了您的安全,请避免在危险环境中使用耳机。
  - ★避免以高音量使用耳机或音箱,不要连续、高音量、长时间进行播放,如果出现不透现象,请调低音量或停止使用。

### 部件说明

配重锤  
抗侧滑按钮  
唱臂支架  
唱臂  
灯罩  
唱针  
指示灯  
转速调节按钮  
蓝牙配对键/灯罩亮度调节按钮  
唱臂升降按钮

简体中文 台式自动唱盘机

黑胶唱片尺寸切换开关  
RCA音频接口  
电源线接口  
唱机/线路输出切换开关  
USB接口(固件更新)  
地线接口

### 灯效说明

- 短按电源键进行灯效切换,顺序为蓝-青-红-紫-黄-白-绿。
- 开机或待机唤醒时,转盘灯(呈蓝色)顺时针旋转一圈后,灯光效果为最后一次灯光设置。
- 关机或进入待机模式时,转盘灯将逆时针旋转一周后熄灭,此时POWER键指示灯常亮(呈橙色)。
- 播放时,转盘灯光常亮,连续短按电源键2次,33转时可改为灯效慢速旋转,45转时可改为灯效快速旋转。
- 双击电源按钮可切换照明效果:跑马灯照明效果或常亮照明效果。
- 蓝牙配对未连接设备时,蓝牙配对指示灯呈橙色闪烁状态。
- 蓝牙回连时,蓝牙配对指示灯呈橙色慢闪状态。
- 蓝牙连接时,蓝牙配对指示灯呈橙色常亮状态。
- 重复播放开启时,重复播放指示灯呈橙色常亮状态。
- 0.5秒内双击配对键,可选择三个亮度等级或关闭灯光。

### 通用操作

#### 供电

本产品使用AC IN 100-240V~50/60Hz 12W供电。  
注:搭配电压过高的适配器可能会损坏机器,请选择推荐使用的适配器进行使用。  
注:完成唱机所有组装前,切勿插入电源插座。开机前,请重新检查所有连接,确保连接正确且牢固。连接或断开电源前,务必关闭唱机。

#### 开/关机

- 设备关机状态下,短按 电源键开机;
- 设备开机状态下,长按 电源键 3 秒关机。
- 若 15 分钟内无任何操作,唱机将进入待机模式,短按电源键待机唤醒。  
注意:设备关机或待机时,指示灯呈橙色。

#### 取/放唱片

打开产品顶盖后进行取,放碟片,然后再盖上顶盖。

简体中文 台式自动唱盘机

### 转速切换

转动转速切换按钮 可将转速在 33 转和 45 转之间切换。

### 播放/暂停

未播放时,短按开始/停止键 开始播放,播放时,短按开始/停止键 停止播放。

### 重复播放

重复播放未开始时,短按 REPEAT 键 进入重复播放状态,当唱片播放至结束时,唱臂自动回到唱片开始位置,从头开始播放唱片;再次短按 REPEAT 键 可退出重复播放模式。

### 唱臂升/降

短按 UP/DOWN 键 可控制唱臂的升/降。

### 输出切换

推动 输出切换按钮,可切换 PHONO OUT 和 LINE OUT。

### 唱片尺寸切换

拨动 唱片尺寸切换开关,可将唱片播放范围在 7 英寸和 12 英寸之间切换。

### 针压调节

有关调节针压的详细操作,请扫描二维码查看

### 更换唱针

有关更换唱针的详细操作,请扫描二维码查看

### 调整唱针落点位置

有关调整唱针落点位置的详细操作,请扫描二维码查看

### 播放唱片

有关播放唱片的详细操作,请扫描二维码查看

### 安装指导

有关转盘、透明盖安装的操作,请扫描二维码查看

Instruction QR code

简体中文 台式自动唱盘机

唱片输出  
线路输出  
连接功放  
有源音箱  
有源音箱

注:确保RCA插头正确插入对应接口,连接松动可能导致噪音、信号中断或音质下降。

- 通过蓝牙连接  
首次将唱片机与蓝牙播放设备连接时,连接过程可能需要长达 1 分钟,请确保配对前设备扬声器已开启,步骤如下:
  - 将蓝牙设备放置在距离唱片机 10 米范围内,尽可能靠近唱片机。
  - 长按配对键进入蓝牙配对模式(指示灯快速闪烁橙色),短按进入蓝牙重新连接模式(指示灯缓慢闪烁橙色)。
  - 唱片机与媒体设备成功配对后,指示灯稳定呈橙色。
  - 声音将传输至该媒体设备。
  - 播放控制由唱片机操作。
  - 音量控制由蓝牙播放设备操作。

### 移动唱片时的注意事项

请使用原始包装材料按原摆放方式包装产品;若没有原始包装材料,请采取以下措施:
 

- ★断开交流适配器与电源插座的连接,取下毛毡垫和转盘,包裹好以防损坏。
- ★安装好唱针保护装置。
- ★用绳子或类似物品将唱臂固定在设备上,防止移动过程中脱落。
- ★用纸张或软布包裹唱片机机身,避免损坏。

### 包装清单(请核对包装内是否包括以下物品)

- TT11 主机
- RCA 音频线
- 电源线
- 铸铝转盘
- 转盘垫
- 透明保护盖
- 翻盖转轴
- 针压调节配重锤
- 快速入门
- 售后维修卡
- 7英寸老黑胶唱片45转速大孔唱片转换垫

简体中文 台式自动唱盘机

### 了解更多

- 有关产品的相关视频说明和常见问题解答(FAQ),请扫描产品 FAQ 二维码。
- 了解更多信息,请访问:www.fioo.com

产品名称:台式自动唱盘机  
产品型号:F6001T  
额定输入:AC 100-240V~50/60Hz  
尺寸:约343x380x109mm  
重量:约3330g  
执行标准:GB4943.1-2022  
制造厂:广州飞傲电子科技有限公司  
地址:广州市白云区龙归街复良发良路21号

由于产品不断改进,各项规格及设计随时更改,恕不另行通知。

### 环保材料说明

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr,VI)	多溴联苯(PBB)	多溴二苯醚(PBDE)
PCB	X	O	O	O	O	O
PCBA 焊点	X	O	O	O	O	O
元器件	X	O	O	O	O	O
显示屏*	X	O	O	O	O	O
电池*	X	O	O	O	O	O
外观件	O	O	O	O	O	O
配件*	X	O	O	O	O	O

注:表中标记“X”的部件,虽因全球技术发展水平限制而无法实现有害物质的替代。  
带\*号部件表示如果在您所购买的产品中无该部件,请您忽略申报该部件信息。  
O:表示该有害物质在该部件所有含材料中的含量均符合GB/T 26572-2011规定的限量要求以下。  
X:表示该有害物质在该部件所有含材料中的含量超出GB/T 26572-2011规定的限量要求。  
根据中国电子行业标准SJ/T 11364-2014 和相关的中国法律法规,本产品及其某些内部或外部组件上可能带有环保使用期限标识,取决于组件和组件制造商,产品及组件上的使用期限标识可能有所不同,组件上的使用期限标识优先于产品上任何与之相冲突的或不环保的使用期限标识。  
10 此环保使用期限只适用于产品在规定的条件下工作

English Desktop Automatic Turntable

### Precautions Before Use

- Safety Notes**
  - ★If any solid object or liquid falls into the product, please switch off the power immediately and it checked by qualified professional personnel before further use.
  - ★Do not attempt to repair or disassemble the product by yourself.
- Power Supply Notes**
  - ★Using an adapter with excessively high voltage may damage the product. Please use only the recommended power adapter.
- Product Notes**
  - ★Please do not place the product in environments with excessively high or low temperatures (above 45°C or below 0°C).
  - ★Please do not place the product near heat sources, in direct sunlight, in dusty areas, humid environments, rain-prone locations, places subject to mechanical shock, uneven surfaces, or inside a closed car.
  - ★Please do not place heavy objects on top of the product.
- Volume Notes**
  - ★When using headphones or speakers, you may not be able to hear surrounding sounds clearly. For your safety, please avoid using headphones in hazardous environments.
  - ★Please avoid using headphones or speakers at high volume. Do not listen continuously at high volume for long periods. If you experience discomfort, please lower the volume or stop using the product.

### Parts Description

Counterweight  
Anti-slip knob  
Tonearm rest  
Tonearm  
Light ring  
Stylus  
Indicator light  
Speed adjustment knob  
Bluetooth pairing button/Light brightness adjustment button  
Power button  
Repeat button  
Start/Stop button  
Tonearm lift button

English Desktop Automatic Turntable

Record size selector switch  
RCA audio ports  
Power input port  
Phono/Line output selector switch  
USB port (firmware update)  
Ground terminal

### Lighting Effects Description

- Short-press the Power button to switch lighting effects in the following order: Blue → Cyan → Red → Purple → Yellow → White → Green.
- When powering on or waking from standby, the turntable light (blue) rotates clockwise for one full circle, after which the lighting effect returns to the last selected setting.
- When powering off or entering standby mode, the turntable light rotates counterclockwise for one full circle and then turns off; at this time, the POWER button indicator remains steadily on in orange.
- During playback, the turntable light stays on. Quickly short press the power button twice: at 33 RPM, the lighting changes to slow rotation; at 45 RPM, it changes to fast rotation.
- Double press the power button to switch the lighting effect between running light mode and steady-on mode.
- When Bluetooth pairing has never been connected, the Bluetooth pairing indicator flashes rapidly in orange.
- During Bluetooth reconnection, the Bluetooth pairing indicator flashes slowly in orange.
- When Bluetooth is connected, the Bluetooth pairing indicator stays steadily in orange.
- When repeat playback is enabled, the repeat indicator stays steadily on in orange.
- Double-press the pairing button within 0.5 seconds to select three brightness levels or turn off the indicator light.

### General Operation

#### Power Supply

This product uses AC IN 100-240V~50/60Hz, 12W power supply.  
Note: Using an adapter with excessively high voltage may damage the product. Please use the recommended adapter.  
Note: Do not connect the power supply before completing all turntable assembly. Before powering on, recheck all connections to ensure they are correct and secure. Always power off the turntable before connecting or disconnecting the power supply.

English Desktop Automatic Turntable

### Power On/Off

- When the device is powered off, short press the Power button to turn it on.
- When the device is powered on, press and hold the Power button for 3 seconds to turn it off.
- If there is no operation for 15 minutes, the turntable will enter standby mode. Short press the Power button to wake up.

Note: When the device is powered off or in standby state, the indicator light is orange.

### Placing/Removing Records

Open the top cover to place or remove the record, then close the cover afterward.

### Speed Switching

Rotate the speed adjustment knob to switch between 33 RPM and 45 RPM.

### Play/Pause

When not playing, short-press the Start/Stop button to start playback. During playback, short-press the Start/Stop button to stop playback.

### Repeat Playback

When repeat playback is off, short-press the REPEAT button to enable repeat mode. When the record finishes playing, the tonearm will automatically return to the beginning of the record and start playback again. Short-press the REPEAT button again to exit repeat mode.

### Tonearm Lift/Lower

Short-press the UP/DOWN button to raise or lower the tonearm.

### Output Switching

Slide the output selector switch to choose between PHONO OUT and LINE OUT.

### Record Size Switching

Toggle the record size selector switch to switch playback range between 7-inch and 12-inch records.

### Tracking Force Adjustment

For detailed instructions on adjusting tracking force, please scan the QR code.

### Stylus Replacement

For detailed instructions on replacing the stylus, please scan the QR code.

### Adjusting Stylus Drop Position

For detailed instructions on adjusting the stylus drop position, please scan the QR code.

### Playing Records

For detailed instructions on playing records, please scan the QR code.

### Installation Guide

For detailed instructions on installing the turntable and transparent cover, please scan the QR code.

Instruction QR code

English Desktop Automatic Turntable

### Connection Methods

- RCA Audio Cable Connection  
Use a high-quality shielded RCA audio cable (not included in the accessory) to connect the turntable to an audio device, as follows:  
According to the input options of your audio device, use the PHONO/LINE selector switch on the back of the turntable to select PHONO or LINE output.
- PHONO output: Select this mode if your amplifier or speakers have a dedicated "PHONO" input. The audio signal will be processed by the external device.
- LINE output: Select this mode if connecting to "AUX," "LINE," or other standard audio input interfaces. The audio signal will be processed by the turntable's built-in preamplifier.
- Connection: Insert the white plug into the white (L) port and the red plug into the red (R) port on the back of the turntable, and then connect the other end of the cable to the corresponding audio input on the external device.

With PHONO  
With LINE  
Connecting Amplifier  
Active Speakers  
Active Speakers

Note: Ensure the RCA plugs are inserted firmly into their respective jacks. Loose connections may cause noise, drop-outs, or degraded audio quality.

- Bluetooth Connection  
When pairing the turntable with a Bluetooth playback device for the first time, the process may take up to 1 minute. Ensure the device's speakers are turned on before pairing.
- Place the Bluetooth device within 10 meters of the turntable, as close as possible.
- Press and hold the pairing button to enter Bluetooth pairing mode (indicator flashes rapidly in orange). Short-press to enter Bluetooth reconnection mode (indicator flashes slowly in orange).

English Desktop Automatic Turntable

- Once the turntable is successfully paired with the playback device, the indicator will remain steadily in orange.
- Audio will be transmitted to the playback device.
- Volume control is performed on the turntable.
- Volume control is performed by the Bluetooth playback device.

### Precautions When Moving the Turntable

Please use the original packaging materials and pack the product in the original arrangement. If the original packaging is not available, please take the following measures:
 

- ★Disconnect the AC adapter from the power outlet, remove the felt mat and platter, and wrap them properly to prevent damage.
- ★Install the styli protective cover.
- ★Secure the tonearm to the turntable with a string or similar item to prevent movement during transport.
- ★Wrap the turntable body with paper or a soft cloth to avoid damage.

### List of Items Included(please check if all the following items are included)

- TT11
- RCA audio cable
- Power cable
- Platter mat
- Flip hinge
- Die-cast aluminum platter
- Transparent protective cover
- Stylus pressure counterweight
- Warranty card
- Quick Start Guide
- 7-inch vintage vinyl 45 RPM large-hole adapter

### To learn more

- For related video instructions of the TT11 and FAQ (Frequently Asked Questions), please scan the QR code below.
- To learn more about the product, please visit our website: www.fioo.com

Due to continuous improvement, every specification and design is subject to change at any time without further notice.

Hereby, Guangzhou FIOO Electronics Technology Co., Ltd. declares that this device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at: www.fioo.com/doc

Function	Frequency	Maximum output power
Bluetooth	2402-2480MHz	7.1dBm

English Desktop Automatic Turntable

### WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be handed as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

### FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.